

# Intermec SR30-USB Setup

reset factory defaults



\60\08\55\24

keyboard selection - North America (\*)



\60\02\53\20\00\00\00

USB - USB cable mode - keyboard HID (\*)



\60\02\56\00\00\00\00

Code 39 - active (\*)



\60\01\50\40\00\02\40

Code 39 - format - full ASCII (extended)



\60\01\50\5A\00\02\40

Code 128 / EAN 128 - Code 128 active (\*)



\60\01\53\20\00\02\40

Code 128 / EAN 128 - EAN 128 active (\*)



\60\01\53\22\00\02\40

Code 128 / EAN 128 - EAN 128 identifier - remove ]C1 identifier



\60\01\53\38\00\00\00

If you are experiencing an error where the favorites menu pops up when you scan a barcode into the Impress System, scan the following barcode to your scanner

postamble - compose: <CR>



\60\02\42\01\00\00\01\00\22\40